


■ Using your washing machine

With the new Samsung washing machine, the hardest part is deciding which category of laundry to wash first.

Detergent and additive information

■ Use the right detergent


The detergent to be used depends on the type of fabric (cotton, synthetics, delicates, wool), the colour, the washing temperature and the degree of soiling. Always use a detergent that foams little, intended for automatic washing machines. Follow the detergent manufacturer's recommendations, which are based on the weight of the laundry, the degree of soiling and the hardness of the water in your area. If you don't know how hard the water is in your area, check with your local authorities.

 Do not use detergent that has hardened or solidified, as it may not dissolve completely before the rinse cycle. As a result, the flushing will not be carried out correctly or the overflow may become blocked.


■ Using the laundry drawer

Your washing machine has separate basins (for laundry and fabric softener).




Divide all washing additives into their respective bins before starting your washing machine.


 **CAUTION** : Do not open the laundry drawer when the washing machine is running. You may be exposed to hot water or steam.


When the **Delay Off** cycle is selected, do not pour detergent directly into the drum. If you do not follow these instructions, your laundry may be discoloured. Use the laundry drawer when the **Delay Off** cycle is selected.


 Do not use the following types of detergent when washing large items:


- Laundry detergent in tablets or capsules
- Detergent requiring a dosing ball and a net

	Pre-wash laundry tray : detergent for pre-washing or starch.
	Main Wash Compartment : Laundry detergent for the main wash, fabric softener, pre-soak, bleach and stain remover.
	Fabric softener tray : additives, such as fabric softener (do not exceed the limit (MAX) of the "A" tray).

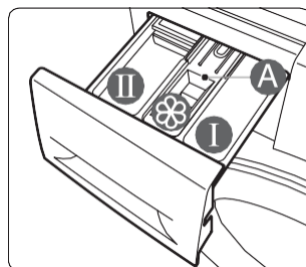

 The actual appearance of the fabric softener compartment may differ from the model.

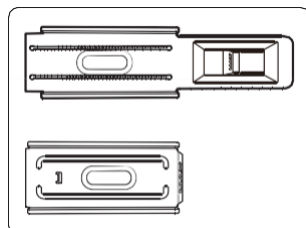

1. Open the laundry drawer at the top left of the washing machine.
2. Add the recommended amount of detergent to the laundry tray, main compartment of the washing product  before starting your washing machine.



To use liquid detergent, use the liquid laundry compartment (see "Using Liquid Detergent (on some models)" on page 23).

Do not pour powdered detergent into the liquid laundry compartment .

3. If applicable, add the recommended amount of fabric softener to the fabric softener tray .


Do not exceed the maximum MAX stroke .




If the fabric softener is in concentrated or thick form, dilute it in a little water before pouring it into the tray to prevent the overflow from being blocked.

Fabric softener is poured over the laundry during the final rinse.






CAUTION : Never put liquid or powder detergent in the fabric softener tray .

4. If you are using the pre-wash function, add the recommended amount of detergent to the pre-wash laundry tray .
5. Push the laundry drawer to close.




When closing the laundry drawer, be careful that fabric softener is not transferred to the fabric softener tray.

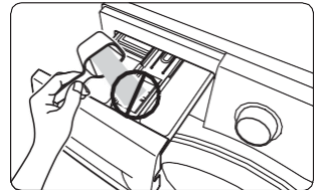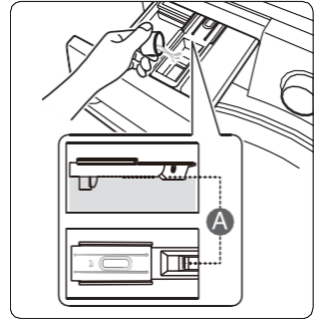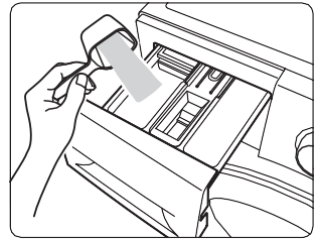


Laundry Capsules

For best results using laundry capsules, please follow these instructions.

1. Place the capsule at the bottom of the empty drum, facing back.

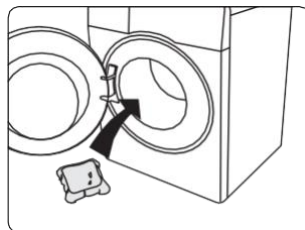

2. Put your laundry in the drum over the capsule.

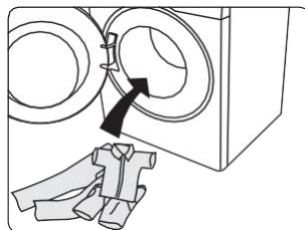


CAUTION : For cycles using cold water or cycles that end in less than an hour, it is recommended to use liquid detergent. Otherwise, the capsule may not dissolve completely.

Use of liquid detergent (on some models)


If you want to use liquid detergent, place the liquid laundry compartment in the laundry drawer's main wash compartment and pour the liquid detergent into it. Do not exceed the MAXIMUM fill line on the liquid laundry compartment.

- Insert the liquid laundry compartment only after removing the laundry drawer from the washing machine by pressing the opening handle (A).
- After washing, there may still be some liquid in the laundry drawer.

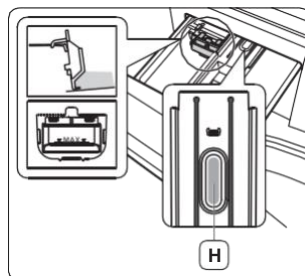

- ATTENTION** :
- Do not use the Pre-Wash function when using liquid detergent.
 - Remove the liquid laundry compartment when using powdered detergent.

Using the Control Panel

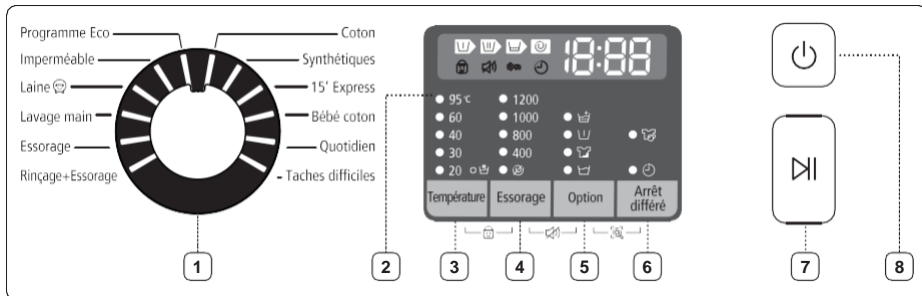

1. Cycle selector


Select the cycle rotation pattern and spin speed.

For more information about each cycle, see the " **Using the Cycle Selector** " section on page 27.

2. Digital Signage




Displays the remaining time of the wash cycle, all cycle information and error messages.


3. Temperature Button

Press this button repeatedly to cycle through the different available temperatures: (Cold water , 20 °C, 30 °C, 40 °C, 60 °C and 95 °C).

4. Spin button

Press this button repeatedly to cycle through the different spin speeds available.





WF80F5E**4*, WF80F5E**H* WF70F5E**4*, WF70F5E**H*	Full tank stop,  , 400, 800, 1200 and 1400 rpm
WF80F5E**2*, WF80F5E**M* WF70F5E**2*, WF70F5E**M* WF60F4E**2*, WF60F4E**M*	Full tank stop,  , 400, 800, 1000 and 1200 rpm
WF60F4E**0*, WF60F4E**L*	Full tank stop,  , 400, 600, 800 and 1000 rpm

No lights	Full tank stop : The laundry soaks in the last rinse water. An emptying or spinning cycle must be carried out to unload the laundry. (When all LEDs are off, the Bowl Full Shutdown option is selected.)
	Without spinning : The laundry remains in the drum and no spinning is carried out after the last emptying.

5. Bouton Option

Press this button repeatedly to scroll through the different options:

Heavy > Soak> Pre-Wash > Rinse+ > Soak + Rinse+ > Heavy + Rinse+ > Pre-Wash + Rinse+ > Off

	<p>Soaking : Use this feature to effectively remove stains from your laundry by soaking it.</p> <ul style="list-style-type: none">• 13 minutes of the wash cycle is spent on the Soak function.• The Soak function continues for 30 minutes with six cycles, where the soak cycles last 1 minute and repeat every 4 minutes.• The Soak function is only available with the following cycles: Cotton, Synthetics, Tough Spots, Daily, Eco Cycle and Baby Cotton.
	<p>Heavy-duty : Use this function when laundry is very dirty and intensive washing is required. This has the effect of increasing the duration of each wash cycle.</p>
	<p>Prewash : Use this feature to pre-wash your laundry before the main wash cycle. The Pre-Wash function is only available with the Cotton, Synthetic, Tough Stains, Daily, Eco Cycle and Baby Cotton cycles.</p>
	<p>Rinse+ : Press this button to add rinse cycles.</p>

6. Delay Stop Button

Press this button repeatedly to cycle through the different Delay Shutdown options (from 3 a.m. to 7 p.m., in one-hour increments).

The time displayed is the time when the wash will end.

7. Start/Pause button



This button allows you to interrupt and restart a cycle.

8. On/off button

Press this button once to turn on the machine. Then press that button again to turn it off.

If the washing machine is left on for more than 10 minutes without any buttons being pressed, it will automatically turn off .

Using the Cycle Selector

Cycle	Usage
Cotton	<p>For cottons, sheets, table linen, underwear, towels, shirts, etc. with little or medium soil. For duvets or duvet covers, the recommended spin cycle speed is 800 RPM (for a load of up to 2.0 kg).</p> <p> The 6 kg class models do not have a duvet wash function .</p>
Synthetic	For blouses, shirts, etc., lightly or moderately soiled, made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or other similar material.
15' Express	<p>for lightly soiled laundry (2 kg maximum) that you need quickly. This cycle lasts approximately 15 minutes, but may differ from the values indicated depending on the pressure, hardness and temperature of the water, the ambient temperature, the type and quantity of laundry to be washed and its degree of soiling, the detergent used, the load balancing, the voltage variations and the options selected.</p> <p> WARNING : there must be less than 20 g of detergent (for a load of 2 kg) or detergent must remain on the clothes.</p>
Baby Cotton	High-temperature washing and extra rinse cycles ensure that no detergent powder lingers and is harmful to your baby's skin.
Daily	For washing everyday clothes, such as underwear and shirts .
Taches difficiles	<p>For stained clothes. The Difficult Stains cycle allows for high-performance stain removal , with extreme care and avoids pre-treatment of stains. For best results, we recommend using the High Temperature option on this cycle to remove the toughest stains (internal resistance increases the wash temperature).</p> <p>This cycle includes a soak to effectively remove stains from your laundry. When soaking, the drum stops rotating for a while, and this is not due to a malfunction.</p>
Programme Eco	The Eco Program cycle at low temperature allows you to obtain very good results while achieving significant energy savings.
Raincoat	For waterproof items like mountain clothing, ski suits and sportswear. Textiles include smart finishes and fibers such as spandex, stretch and microfibers.
Wool	<p>Only for machine washable woolsens. The load must be less than 2 kg. (Class 6 kg model: 1.5 kg)</p> <p>The Wool cycle allows you to wash your laundry gently by making the drum perform very light rocking movements. These slight movements of Soaking and soaking is done continuously to prevent the wool fibers from wrinkling or deforming. This phenomenon of the washing machine stopping/starting during soaking is not a malfunction.</p> <p>A neutral detergent is recommended for the Wool cycle to achieve better washing results and preserve the softness of the wool fibers.</p>
Lavage main	Very light wash cycle, as gentle as hand washing.
Spin-drying	Performs an additional spin cycle to remove as much water as possible from the laundry.
Rinçage+Essorage	For laundry that only needs a rinse or to add fabric softener to a detergent.


Child safety


The Child Lock feature allows you to lock the buttons so that the wash cycle you have chosen cannot be changed.

Activation/Deactivation

To turn on/off the Child Lock feature, press the **Temperature** and **Spin** buttons at the same time for 3 seconds.

The "Child Lock" light  illuminates when this feature is enabled.

 When the Child Lock feature is enabled, only the **On/Off button** works. This Child Lock feature remains active even after the washing machine has been turned off and on or unplugged and plugged back in.

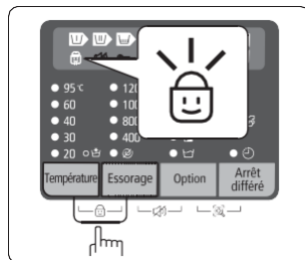


Signal sonore

The Beep function can be selected during all cycles. When active, the sound is muted in all cycles. The setting remains on even if you turn the device off and on repeatedly.

Activation/Deactivation

To enable/disable the Beep function, press the **Spin** and **Option** buttons at the same time for 3 seconds.

The "Beep Signal" light  illuminates when this feature is enabled.

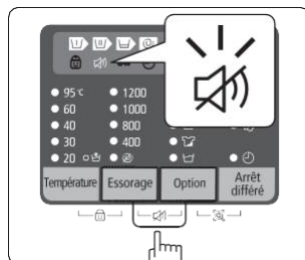

Delayed shutdown

You can schedule your washing machine to automatically end the wash cycle later, by choosing a delayed start from 3 to 19 hours (in one-hour increments). The time displayed is the time when the wash will end.

1. Add your laundry without packing it into the drum, without overloading it.
2. Press the **Power button** to turn on the power.
3. Select the cycle and options that are appropriate for the load.
4. Press the **Delay Stop** button repeatedly until you get the desired delayed start.
5. Press the **Start/Pause button**.



The "Delay Start" light  illuminates and the clock starts the countdown until it reaches the set time.

6. To cancel the Delay Stop function, turn the washing machine off and then back on by pressing the **On/Off button**.

Doing your laundry



■ Doing laundry using the cycle selector

Your new washing machine makes it easy with Samsung's Fuzzy Control. When you choose a cycle, the washing machine sets the appropriate options for washing temperature, time and speed.

1. Turn on the water supply.
2. Press the **Power button** to turn on the power.
3. Open the window.
4. Add your laundry without packing it into the drum, without overloading it.
5. Close the window.
6. Add detergent and, if necessary, fabric softener or pre-wash liquid to the appropriate trays in the laundry drawer.
 The pre-wash function is only available with the Cotton, Synthetic, Baby Cotton, Daily, Tough Stains and Eco Program cycles. Use a pre-wash cycle only if the laundry to be washed is very dirty.
7. Use the Cycle Selector to select the appropriate cycle based on the type of laundry: Cotton, Synthetics, 15' Express, Baby Cotton, Daily, Tough Stains, Eco Cycle, Waterproof, Wool and Hand Wash. The LEDs for the selected cycle illuminate on the control panel.
8. At this point, you can select the wash temperature, number of rinse cycles, spin speed and delay start time by pressing the corresponding buttons.
9. Press the **Start/Pause** button to start the wash. The progress indicator will light up and the remaining wash time will appear on the screen.
 The total cycle time and number of rinse cycles in the Cotton cycle may vary depending on the amount of laundry.
10. At the end of the cycle, the washing machine stops automatically. Open the door and remove the laundry.


■ Suspend washing

It is possible to add or remove laundry within 5 minutes of starting the wash cycle.

1. Press the **Start/Pause** button to unlock the window.
 If the water level or temperature inside the drum unit is HIGH(E), the door will not open and the "Door Lock" light  will flash. In this case, wait for the light to stop flashing. (It takes about 1 or 2 minutes for the light to stop flashing.)
2. Open the door and add/remove the laundry.
3. After closing the window, press the **Start/Pause** button to restart the wash cycle.

Doing laundry manually

You can do your laundry manually without using the cycle selector.

1. Turn on the water supply.
2. Press the **Power button** to turn on the power.
3. Open the window.
4. Add your laundry without packing it into the drum, without overloading it.
5. Close the window.
6. Add detergent and, if necessary, fabric softener or pre-wash liquid to the appropriate trays in the laundry drawer.
7. Turn the cycle selector to select the Cotton cycle.
8. Press the **Temperature button** to select the temperature. (Cold water , 20°C, 30°C, 40°C, 60°C and 95°C)
9. Press the **Spin button** to choose the spin speed.
(No light: Full tank stop, No spin)
10. Press the **Delay Stop button** repeatedly to cycle through the different Delay Stop options available (from 3 a.m. to 7 p.m., in one-hour increments). The time displayed is the time when the wash will end.
11. Press the **Start/Pause button** to start washing.

Washing instructions

Follow these instructions to ensure that your laundry is perfectly clean and that you can use your washing machine in the most efficient way .



Always check the textile symbol on the garment before washing.

Sort and wash your laundry according to the following criteria:

- Textile symbol: separate cotton, mixed fibers, synthetics, silk, wool, and rayon.
- Colors: Separate white and colors. Wash coloured clothing separately.
- Size: Placing clothes of different sizes in the same load improves the washing action.
- Sensitivity: Wash delicates separately, using the Delicates wash cycle for new virgin wool and silk items, as well as curtains. Check the labels on the clothing you wash or refer to the " **Table of Textile Symbols** " section on page **43**.

Emptying the pockets

Before each laundry, empty all the pockets of the clothes to be washed. Small, hard, irregularly shaped objects such as coins, knives, thumbtacks or paper clips can damage your washing machine.

Avoid washing clothes with large buckles, buttons, or other heavy metal accessories. Any metal part on a garment may damage the linen and the drum. Put clothes with buttons or embroidery inside out before washing. Be sure to close the zippers of pants and jackets so as not to damage the drum. Zippers should be kept closed with a thread before washing.

Clothing with straps can become tangled with other clothing, which can damage it. Be sure to tie the straps together before starting the wash cycle.

Pre-wash cotton

When combined with modern detergents, your new washing machine delivers perfect results while saving energy, time, water and laundry. However, if your cotton pads are particularly dirty, use a pre-wash cycle with a protein detergent.

■ Assess loading capacity

Do not overload the washing machine, otherwise your laundry will not be washed properly. Use the table below to determine the capacity for the type of laundry to be washed.

Fabric Type	Loading Capacity (kg)		
	WF80F5E	WF70F5E	WF60F4E
Cotton	8,0	7,0	6,0
Synthetic	3,5	3,5	3,0
Raincoat	2,0	2,0	2,0
Wool	2,0	2,0	1,5



When the laundry is incorrectly balanced and the error code " EU " is displayed, redistribute the load. If the laundry is poorly balanced, the spin efficiency may be less.



When washing sheets or duvets, the washing time may be longer or the spin efficiency may be lower.

For duvets or duvet covers, the maximum recommended spin cycle speed is 800 RPM and the loading capacity is up to 2.0 kg.




The 6 kg class models do not have a duvet wash function.



CAUTION : Be sure to place bras (water washable) in a laundry bag (to be purchased separately).

- The metal parts of the structure can come out of the bra and damage the laundry. It is therefore advisable to insert them into a fine laundry bag.
- Small, lightweight clothing such as socks, gloves, socks and tissues can get caught between the window and the wall of the washing machine. Place them in a fine laundry bag.

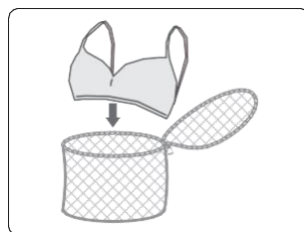

CAUTION : Do not wash the laundry bag alone, without laundry. This could cause abnormal vibrations that could lead to unintentional machine movement or injury.