


# Parts and features

## CONTROL PANEL

DW60M6050F\*/DW60M6051F\*/DW60M6040F\*  
 DW60M6050U\*/DW60M6051U\*/DW60M6040U\*  
 DW60M6050S\*/DW60M6051S\*/DW60M6040S\*

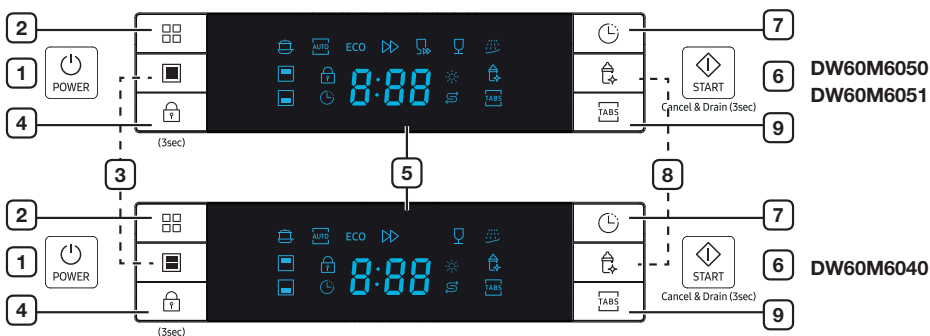


<b>1</b>	<b>Power</b>	Press this button to turn on your dishwasher: the screen lights up.
<b>2</b>	<b>Program</b>	To select washing program press this button.
<b>3</b>	<b>Half load</b>	For small amount of loading items, use either the upper or lower basket only to save energy. Press the <b>Half load</b> button to select the upper or lower basket.
<b>4</b>	<b>Control lock</b>	This option allows you to lock the buttons on the control panel so children cannot accidentally start the dishwasher by pressing the buttons on the panel. To lock and unlock the buttons on the control panel, hold down both the <b>Control lock</b> buttons for three (3) seconds.
<b>5</b>	<b>Display window</b>	Running indicator, delay time, error codes and etc.
<b>6</b>	<b>Start</b>	To start a cycle, press the <b>Start</b> button before closing the door. <b>*Reset</b> : To cancel a currently running cycle and drain the dishwasher, press and hold the <b>Start</b> button for three (3) seconds. Once the dishwasher is reset, select a cycle and option, and then press <b>Start</b> to restart the dishwasher.
<b>7</b>	<b>Delay start</b>	Press this button to set the delayed hours for washing. You can delay the start of washing up to <b>24</b> hours. One press on this button delays the start of washing by one hours.
<b>8</b>	<b>Hygiene</b>	Push the <b>Hygiene</b> button for the best possible hygiene in your dishwasher. At the final rinse it heat up to 67 °C and hold this temperature for a several minutes. This function is available with all program except Quick Wash and Pre Wash.
<b>9</b>	<b>Multi tab</b>	To select Multi tap option which needs salt and rinse aid but a Multi tab tablet. This option can be selected on Intensive, Auto or ECO program only.

- When the door is open only the **Power** button will operate.
- You can select options (**Multi tap**, **Delay start** and/or **Half load**) before starting a cycle.



**IMPORTANT:** To get the best performance from your dishwasher, read all the operating instructions before using it for the first time.
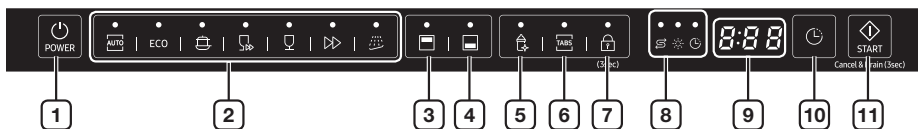
## DW60M6050BB







## DW60M6040BB



1 <b>Power</b>	Press this button to turn on your dishwasher : the screen lights up.
2 <b>Cycle</b>	To select washing program press this button.
3 <b>Upper</b>	<p>When you select <b>Upper</b>, only the upper rack nozzle is activated. The lower nozzle will not operate. Use this feature to wash a small load of dishes or glasses placed in the upper rack.</p> <p> When you select <b>Upper</b>, place dishes, glasses, etc. in the upper rack only. The dishwasher will not wash items placed in the lower rack.</p> <p>Selecting <b>Upper</b> reduces both the cycle time and the amount of electricity consumed.</p>
4 <b>Lower</b>	<p>When you select <b>Lower</b>, only the lower rack nozzle is activated. The upper nozzle will not operate. Use this feature to wash a small load of dishes or glasses placed in the lower rack.</p> <p> When you select <b>Lower</b>, place items, glasses, etc. in the lower rack only. The dishwasher will not wash items placed in the upper rack.</p> <p>Selecting <b>Lower</b> reduces both the cycle time and the amount of electricity consumed.</p>
5 <b>Hygiene</b>	Push the <b>Hygiene</b> button for the best possible hygiene in your dishwasher. At the final rinse it heat up to 67 °C and hold this temperature for a several minutes. This function is available with all program except Quick Wash and Pre Wash.
6 <b>Multi tab</b>	To select <b>Multi tab</b> option which needs salt and rinse aid but a <b>Multi tab</b> tablet. This option can be used with all program except Auto, Quick Wash and Pre Wash.


# Parts and features

<p><b>7 Control lock</b></p>	<p>This option allows you to lock the buttons on the control panel so children cannot accidentally start the dishwasher by pressing the buttons on the panel.</p> <p>To lock and unlock the buttons on the control panel, hold down both the <b>Control lock</b> buttons for three (3) seconds.</p>
<p><b>8 Indicator</b></p>	<p>If <b>Rinse Refill</b> or <b>Salt Refill</b> indicator is lit, it means rinse or salt is needed to refill.</p> <p> <b>Delay start Indicator</b></p> <ul style="list-style-type: none"> <li>If the “<b>Delay start</b>” indicator is lit, it means, you select “<b>Delay start</b>” option.</li> </ul> <p> <b>Rinse Refill Indicator</b></p> <ul style="list-style-type: none"> <li>If the “<b>Rinse Refill</b>” indicator is lit, it means the dishwasher is low on dishwasher rinse aid and requires a refill.</li> </ul> <p> <b>Salt Refill Indicator</b></p> <ul style="list-style-type: none"> <li>If the “<b>Salt Refill</b>” indicator is lit, it means the dishwasher is low on dishwasher salt and needs to be refilled.</li> </ul>
<p><b>9 Display</b></p>	<p>Display the remaining time, error code, or delay time.</p>
<p><b>10 Delay start</b></p>	<p>Press this button to set the delayed hours for washing. You can delay the start of washing up to <b>24</b> hours. One press on this button delays the start of washing by one hours.</p>
<p><b>11 Start</b></p>	<p>To start a cycle, press the <b>Start</b> button before closing the door.</p> <p><b>*Reset</b> : To cancel a currently running cycle and drain the dishwasher, press and hold the <b>Start</b> button for three (3) seconds.</p> <p>Once the dishwasher is reset, select a cycle and option, and then press <b>Start</b> to restart the dishwasher.</p>

 You can select options (**Multi tab, Half load, Delay, Hygiene**) before starting a cycle.


 To prevent the touchpad from losing response sensitivity, follow these instructions:



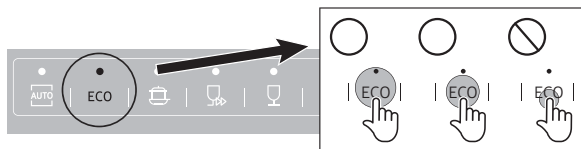



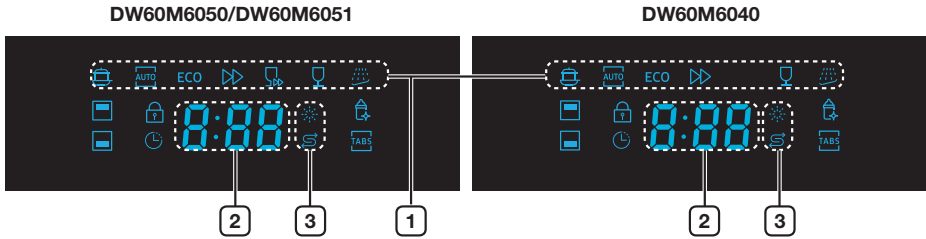

- Touch the center of each keypad using one finger. Do not push.
- Clean the touch control's surface regularly with a soft, damp cloth.
- Be careful not to touch more than one touch key pad at a time, except as directed.



## DISPLAYS

DW60M6050F\*/DW60M6051F\*/DW60M6040F\*  
 DW60M6050U\*/DW60M6051U\*/DW60M6040U\*  
 DW60M6050S\*/DW60M6051S\*/DW60M6040S\*



<b>1</b>	<b>Program icons</b>	Press the <b>Program</b> button to select each program.
	<b>Intensive</b>	Heavily soiled items include pots and pans
	<b>Auto wash</b>	Lightly to heavily soiled daily using items, automatic detection of the amount of soils.
<b>ECO</b>	<b>ECO</b>	Normally soiled daily using items, with reduced energy and water consumptions.
	<b>Express</b>	Normal daily used items, with short cycle time.
	<b>Quick wash</b>	Lightly soiled with very short cycle time. (DW60M6050/DW60M6051)
	<b>Delicate</b>	Lightly soiled delicate items.
	<b>Pre wash</b>	Cold water rinse for removing dirt before running another program.
<b>2</b>	<b>Display</b>	Display the remaining time, error code, or delay time.
<b>3</b>	<b>Refill indicators</b>	If Rinse or Salt Refill indicator is lit, it means rinse or salt is needed to refill.
	<b>Rinse refill indicator</b>	If Rinse or Salt Refill indicator is lit, it means rinse or salt needs to be refilled. To refill the rinse reservoir, refer to the “When to refill the rinse aid dispenser” section on page <b>22</b> .
	<b>Salt refill indicator</b>	If the “Salt Refill” indicator is lit, it means the dishwasher is low on dishwasher salt and needs to be refilled. To refill the salt reservoir, refer to the “Loading the salt into the softener” section on page <b>20</b> .

# Parts and features









 
DW60M6050BB/DW60M6040BB

DW60M6050



DW60M6040



<b>1</b>	<b>Program icons</b>	Press the <b>Program</b> button to select each program.
	<b>Auto wash</b>	Lightly to heavily soiled daily using items, automatic detection of the amount of soils.
<b>ECO</b>	<b>ECO</b>	Normally soiled daily using items, with reduced energy and water consumptions.
	<b>Intensive</b>	Heavily soiled items include pots and pans
	<b>Quick wash</b>	Lightly soiled with very short cycle time. (DW60M6050/DW60M6051)
	<b>Delicate</b>	Lightly soiled delicate items.
	<b>Express</b>	Normal daily used items, with short cycle time.
	<b>Pre wash</b>	Cold water rinse for removing dirt before running another program.
<b>2</b>	<b>Refill indicators</b>	If Rinse or Salt Refill indicator is lit, it means rinse or salt is needed to refill.
	<b>Salt refill indicator</b>	If the "Salt Refill" indicator is lit, it means the dishwasher is low on dishwasher salt and needs to be refilled. To refill the salt reservoir, refer to the "Loading the salt into the softener" section on page <b>20</b> .
	<b>Rinse refill indicator</b>	If Rinse or Salt Refill indicator is lit, it means rinse or salt needs to be refilled. To refill the rinse reservoir, refer to the "Filling the rinse aid reservoir" section on page <b>22</b> .
	<b>Delay start indicator</b>	If the "Delay start" indicator is lit, it means, you select "Delay start" option.
<b>3</b>	<b>Display</b>	Display the remaining time, error code, or delay time.

# Using the detergent and water softener

## WATER SOFTENER MODE (WATER HARDNESS LEVEL SETTING)

The dishwasher is designed to allow for adjusting the amount of salt consumed based on the hardness of the water used. This is intended to optimise the level of salt consumption. To set the salt consumption, proceed as below:

1. Switch on the appliance;
2. Press the **Pre Wash or Program** button for more than 5 seconds to start the water softener set model within 60 seconds after the appliance was switched on;
- Press the **Pre Wash or Program** button to select the proper set according to your local environment, the sets will change in the following sequence: H1 → H2 → H3 → H4 → H5 → H6; it is recommended that adjustments should be made in accordance with the following table.  
\* The manufactory setting: H3 (EN 50242)
3. Wait for 5 seconds to end the set up model.

WATER HARDNESS				Selector Position	Salt consumption (gram/cycle)
° dH	° fH	° Clark	mmol/l		
0-5	0-9	0-6	0-0.94	H1	0
6-11	10-20	7-14	1.0-2.0	H2	9
12-17	21-30	15-21	2.1-3.0	H3	12
18-22	31-40	22-28	3.1-4.0	H4	20
23-34	41-60	29-42	4.1-6.0	H5	30
35-55	61-98	43-69	6.1-9.8	H6	60

- 1 dH (German degree) = 0.178 mmol/l
- 1 Clark (British degree) = 0.143 mmol/l
- 1 fH (French degree) = 0.1 mmol/l

- Contact your local water board for information on the hardness of your water supply.

### WATER SOFTENER

The hardness of the water varies from place to place. If hard water is used in the dishwasher, deposits may form on dishes and utensils. The appliance is equipped with a special softener that uses a salt specifically designed to eliminate lime and minerals from the water.

Regeneration will be operated in dry phase with an additional 2.0-2.5 l of water being used and 4-10 minutes taken for the cycle.

The energy used may be increased however this should be by an insignificant amount.

[Deposits on utensils]



# Using the detergent and water softener

---

## LOADING THE SALT INTO THE SOFTENER

---


Always use salt intended for use with dishwasher.

The salt container is located beneath the lower rack and should be filled as follows:


### ATTENTION

- Only use salt specifically designed for use in dishwashers. All other types of salt not specifically designed for use in a dishwasher, especially table salt, will damage the water softener. In case of damages caused by the use of unsuitable salt the manufacturer does not give any warranty nor is liable for any caused damages.
- Only fill with salt just before starting one of the complete washing programs. This will prevent any grains of salt or salty water, which may have been split, remaining of the bottom of the machine for any period of time, which may cause corrosion.
- After the first wash cycle the control panel light expires.


1. Remove the lower basket and then unscrew and remove the cap from the salt container.

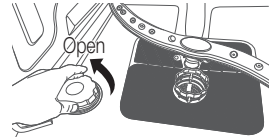

2. If you are filling the container for the first time, fill 2/3 of its volume with water (around 1 liter).
3. Place the end of the funnel (supplied) into the hole and introduce about 1.5 kg of salt. It is normal for a small amount of water to come out of the salt container.

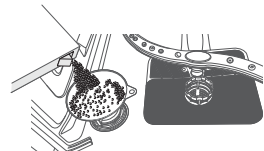

4. Carefully screw the cap back on.

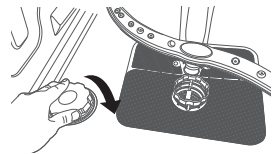

5. Usually, the salt warning light will be off after the salt container is filled with salt.



- The salt container must be refilled when the salt warning light on the control panel comes on. Although the salt container is filled enough, the indicator light may not switch off until the salt fully dissolves.  
If there is no salt warning light on the control panel, you can judge when to load the salt into the softener by the cycles that the dishwasher has run.
- If a lot of salt is split inside the dishwasher, run a pre wash program to reduce the spillage.

## USING DETERGENT

All dishwasher cycles require detergent in the detergent compartment.

Add the correct amount of detergent for the selected cycle to ensure the best performance.


**CAUTION:** Use dishwasher detergent only. Regular detergent produces too much foam, which may decrease the dishwasher's performance or cause it to malfunction.


**WARNING:** Do not swallow dishwasher detergent. Avoid breathing in the fumes. Dishwasher detergent contains irritants and caustic chemicals that can induce respiratory conditions. If you have swallowed dishwasher detergent or inhaled the fumes, seek medical attention immediately.

**WARNING:** Keep dishwasher detergent out of the reach of children.

### Filling the detergent dispenser


1. Open the detergent dispenser flap by pushing the detergent dispenser release catch.

 The flap is always open at the end of a dishwashing cycle.

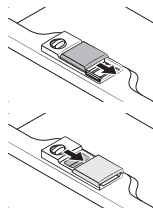


2. Add the recommended amount of detergent to the main wash detergent compartment.
3. Close the flap by sliding it to the left and then pressing it down.

 There is no separate button that is specific to using tablet detergents.

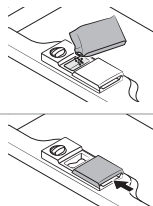

4. For better cleaning result, especially if you have very dirt items, add small amount (about 8 g) of detergent on the door. That will act in prewash phase.

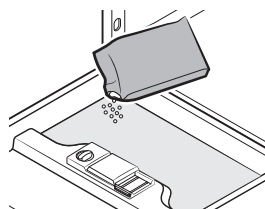

# Using the detergent and water softener

---

## USING RINSE AID

---

### Filling the rinse aid reservoir

---

When the Rinse Refill indicator lights up on the control panel, refill with rinse aid.

Your dishwasher has been designed to use liquid rinse aid only.


Using a powdered rinse aid will clog the reservoir opening and cause the dishwasher to malfunction.

Rinse aid improves the drying performance of the dishwasher.


**⚠ CAUTION:** Do not add regular detergent to the rinse aid reservoir.

1. Remove the rinse aid reservoir cap by rotating it counterclockwise.


 Adding rinse aid to tablet detergents will improve drying performance.

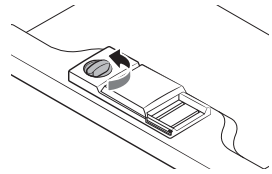


2. Fill the rinse aid reservoir with rinse aid.

 Use the viewing port when filling the rinse aid reservoir.

**⚠ CAUTION:** Do not fill the reservoir above the full level indicator. Excess rinse aid can overflow during the wash cycle.

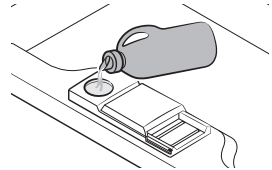


3. Turn the rinse aid indicator dial to a number between 1 and 6. The higher the number, the more rinse aid the dishwasher uses. If you are unable to rotate the rinse aid dial easily, try using a coin.
4. Close the rinse aid reservoir cap by rotating it clockwise.

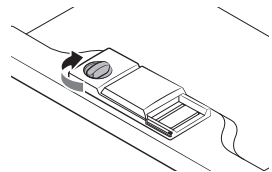



## HOW TO USE THE MULTI TAP OPTION

Your dishwasher has a Multi tap option which does not need salt and rinse aid but a 3 In1 tablet. This option can select on Intensive, Eco program only.

 The Multi tap setting is only for use with Multi tap tablets. If using Multi tap tablet without this option, the appliance will not get its best performance.

1. Put the Multi tap tablet into the container then start the Multi tap option.
2. Close the lid and press until it locks in place.

 When using Multi tap compact combination detergents ensure that the lid can be closed correctly.

 **ATTENTION:** Keep all detergents in a safe place out of children's reach. Always add the detergent in the dispenser just before starting the dishwasher.



# Loading the dishwasher racks

For best performance of the dishwasher, follow these loading guidelines. Features and appearance of racks and silverware baskets may vary from your model.

## Attention before or after loading the dishwasher racks

Scrape off any large amounts of leftover food. It is not necessary to rinse the dishes under running water. Place objects in the dishwasher in the following order:

1. Items such as cups, glasses, pots/pans, etc. are stood upside down.
2. Curved items, or those with recesses, should be at a slant so that water can run off.
3. They are stacked securely and can not tip over.
4. They do not prevent the spray arms from rotating while washing takes place.


Very small items should not be washed in the dishwasher as they could easily fall out of the racks.

## Removing the dishes


To prevent water dripping from the upper basket into the lower basket, we recommend that you empty the lower basket first and then the upper basket.

## LOADING THE UPPER BASKET

The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups and saucers, as well as plates, small bowls and shallow pans (as long as they are not too dirty). Position the dishes and cookware so that they will not get moved by the spray of water. Always place glasses, cups & bowls upside down.

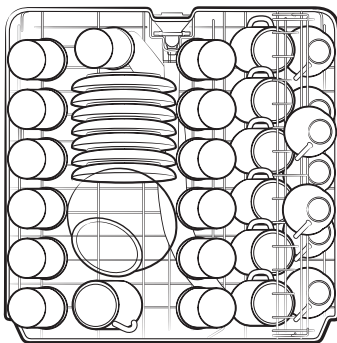

DW60M6050  
DW60M6051  
(14 place setting)

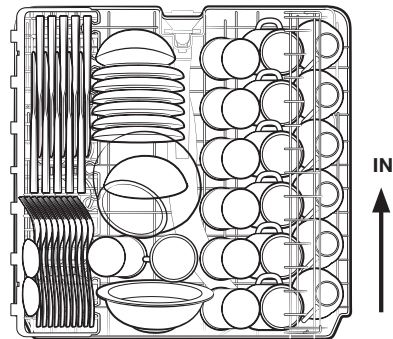


DW60M6040  
(13 place setting)

## Adjusting the Upper Basket

The height of the upper basket can be adjusted in order to create more space for large utensils both for the upper/lower basket.

1. To lower the upper rack, press the "A" levers located at the left and right sides of the upper basket and push the upper basket downwards slightly at the same time.
2. To raise the upper rack, just pull the upper basket upwards without operating any levers.

**⚠ CAUTION:** We recommend adjusting the height of the upper basket before loading dishes into the basket. If you adjust the the basket after loading the dishes, you may damage the dishes.

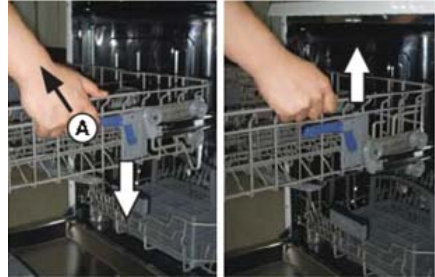

To lower position

To upper position

# Loading the dishwasher racks


## LOADING THE LOWER BASKET

We recommend that you place large items which are most difficult to clean in to the lower rack: pots, pans, lids, serving dishes and bowls, as shown in the figure to the right.


It is preferable to place serving dishes and lids on the side of the racks in order to avoid blocking the rotation of the top spray arm. Pots, serving bowls, etc. must always be placed top down.

Deep pots should be slanted to allow water to flow out.


The bottom rack feature fold down tine rows so that larger or more pots and pans can be loaded.

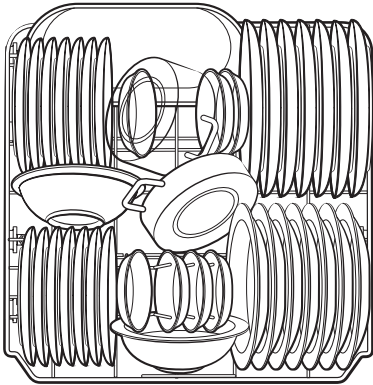

DW60M6050  
DW60M6051  
(14 place setting)

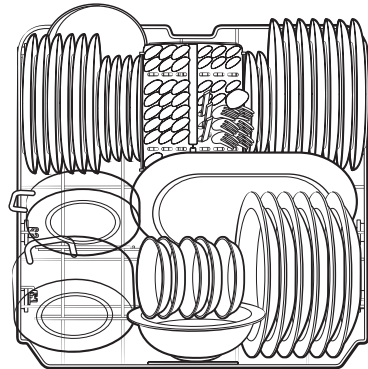


DW60M6040  
(13 place setting)



 Long items, serving cutlery, salad servers and big knives should be placed on the shelf so that they do not obstruct the rotation of the spray arms.

## FOLDING SPIKES OF LOWER BASKET

For better stacking of pots and pans, the spikes can be folded down and/or removable tine as show in the picture below.

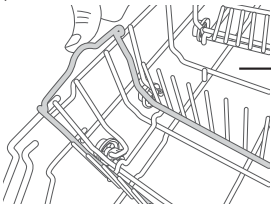

DW60M6050  
DW60M6051

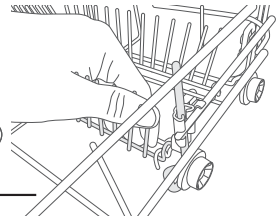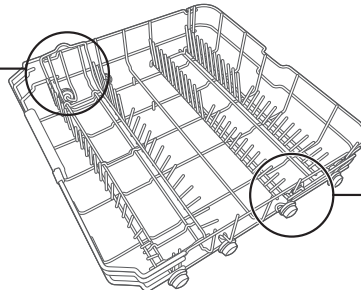


DW60M6050  
DW60M6051  
DW60M6040

## CUTLERY(SILVERWARE) TRAY

Silverware should be placed in the cutlery tray with handles at the bottom: The spoon should be loaded individually into the appropriate slots, especially long utensils should be placed in the horizontal position at the front of the upper basket.

DW60M6050\*\*/DW60M6051\*\*

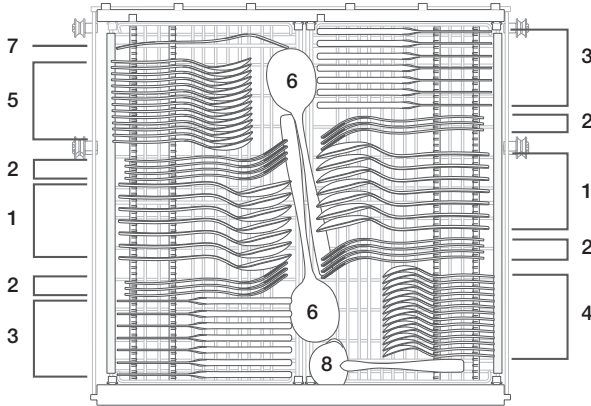

1	Soup spoons		5	Dessert spoons	
2	Forks		6	Serving spoons	
3	Knives		7	Serving forks	
4	Teaspoons		8	Gravy ladles	











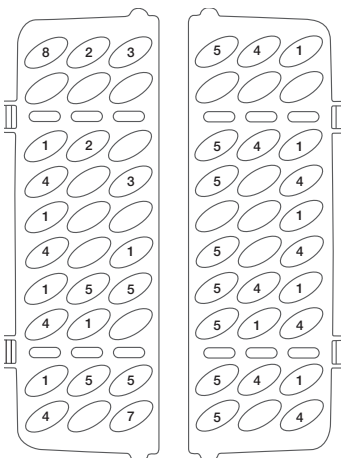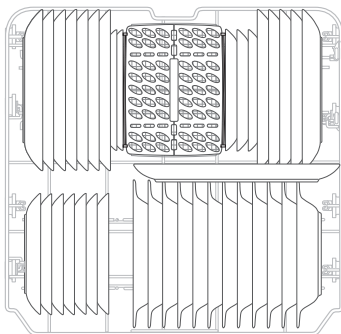

### ⚠ WARNING

- Do not let any item extend through the bottom.
- Always load sharp utensils with the sharp point down!

# Loading the dishwasher racks

DW60M6040\*\*



1	Soup spoons		5	Dessert spoons	
2	Forks		6	Serving spoons	
3	Knives		7	Serving forks	
4	Teaspoons		8	Gravy ladles	





## WARNING

- Do not let any item extend through the bottom.
- Always load sharp utensils with the sharp point down!

## FOR WASHING IN THE DISHWASHER THE FOLLOWING CUTLERY/ DISHES


Not suitable	Limited suitability
Plastic items that are not heat resistant. Older cutlery with glued parts that is not temperature resistant. Bonded cutlery items or dishes. Pewter or Copper items Lead crystal glass. Steel items subject to rusting. Wooden platters. Items made from synthetic fibres.	Some types of glasses can become dull after a large number of washes. Silver and aluminium parts have a tendency to discolour during washing. Glazed patterns may fade if machine washed frequently.

-  Do not try and wash items soiled with cigarette ash, candle wax, lacquer or paint. If you buy new dishes please make sure that they are suitable for dishwashers.
-  Please do not overload your dishwasher. Do not use dishes that are not suitable for dishwashers. This is important for good results and for reasonable energy consumption.

### When loading the dishes and cutlery

Dishes and cutlery must not impede the rotation of the spray arms.

Load hollow items such as cups, glasses, pans etc. with the opening downwards so that water cannot collect in the container or a deep base.

-  Dishes and items of cutlery must not lie inside one another, or cover each other
  - To avoid damage to glasses, they must not touch.
  - Load large items which are most difficult to clean into the lower rack.
  - The upper rack is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups.

#### ATTENTION

Long bladed knives stored in an upright position are a potential hazard!

Long and/or sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket.

### Damage to glassware and other dishes.

Possible causes	Suggested remedy
<ul style="list-style-type: none"> <li>• Type of glass or manufacturing process. Chemical composition of detergent.</li> <li>• Water temperature and duration of dishwasher programme.</li> </ul>	<ul style="list-style-type: none"> <li>• Use glassware or porcelain dishes that have been marked dishwasher-proof by the manufacturer.</li> <li>• Use a mild detergent that is described as kind of dishes. If necessary, seek further information from detergent manufacturers.</li> <li>• Select a programme with as low a temperature.</li> <li>• To prevent damage, take glass and cutlery out of the dishwasher as soon as possible after the programme has ended.</li> </ul>

# Washing programmes

---

## TURNING ON THE APPLIANCE

---

Starting a cycle wash

1. Draw out the lower and upper basket, load the dishes and push them back..  
It is recommended to load the lower basket first, then the upper one (see the section entitled “Loading the dishwasher racks”).
2. Pour in the detergent (see the section entitled “Using the detergent and water softener”).
3. Insert the plug into the socket. The power supply is 220-240 V~, 50 Hz, the specification of the socket is 10 A 250 VAC. Make sure that the water supply is turned on to proper pressure.
4. Close the door, press the **Power** button, to switch on the machine.



A click could be heard when the door is closed perfectly. When the washing is over, you can shut off the switch by pressing **Power** button.

## CHANGE THE PROGRAMME

---

Premise:

1. A cycle that is underway can only be modified if it has only been running for a short time. Otherwise, the detergent may have already been released, and the appliance may have already drained the wash water. If this is the case, the detergent dispenser must be refilled (see the section entitled “Filling the detergent dispenser”).
2. Press **Power** button or **Reset** button 3 seconds to cancel the programme, and turn on it again, then you can change the programme to the desired cycle setting.



If you open the door during a wash cycle, the machine will pause. The program light will stop blinking and the buzzer will beep every minute unless you close the door. After you close the door, the machine will keep on working after 3 seconds automatically.

If your model has broken memory function, the machine will go on to finish the selected program after the power cut.

### Adding dishes

---

A forgotten dish can be added at any time before the detergent dispenser opens.

1. Open the door a little to stop the washing.
2. After the spray arms stop working, you can open the door completely.
3. Add forgotten dishes.
4. Close the door, the dishwasher will work after ten seconds.



**WARNING:** It is dangerous to open the door when washing, because the hot water may scald you. If the door is opened while the dishwasher is running, a safety mechanism is activated and stops the cycle.

## AT THE END OF THE WASH CYCLE

When the working cycle has finished, the buzzer of dishwasher will beep shortly, then stop. In the digital display appears "0", only in this case the programme has ended.

1. Switch off the dishwasher by pressing the **Power** button.
2. Turn off the water tap!

### Open the door carefully. Hot steam may escape when the door is opened!

- Hot dishes are sensitive to knocks. The dishes should be allowed to cool down around 15 minutes before removing from the appliance.
- Open the dishwasher's door, leave it and wait a few minutes before removing the dishes. In this way they will be cooler and the drying will be improved.
- Unloading the dishwasher.



It is normal that the dishwasher is wet inside.

Empty the lower basket first and then the upper one. This will avoid water dripping from the upper basket onto the dishes in the lower one.

## WASH CYCLE TABLE

DW60M6050\*\*/DW60M6051\*\*/DW60M6040\*\*

Program	Description of Cycle	Running time (min)	Energy (kWh)	Water (ℓ)
Intensive	Pre Wash (50 °C)	175	1.6	17.5
	Wash (60 °C)			
	Rinse			
	Rinse			
	Rinse (70 °C)			
	Drying			
Intensive + Hygiene	Pre Wash (50 °C)	200	1.65	17.5
	Wash (60 °C)			
	Rinse			
	Rinse			
	Rinse (70 °C)			
	Drying			
ECO	Pre Wash	225	0.93	10.5
	Wash (50 °C)			
	Rinse (55 °C)			
	Drying			
	Drying			
ECO + Hygiene	Pre Wash	235	1.1	10.5
	Wash (50 °C)			
	Rinse (60 °C)			
	Drying			
	Drying			
Delicate	Pre Wash	130	0.9	13
	Wash (40 °C)			
	Rinse			
	Rinse (60 °C)			
	Drying			
Delicate + Hygiene	Pre Wash	140	1.0	13
	Wash (40 °C)			
	Rinse			
	Rinse (65 °C)			
	Drying			

# Washing programmes

Program	Description of Cycle	Running time (min)	Energy (kWh)	Water (ℓ)
Express	Pre Wash (50 °C)	60	1.15	10
	Wash (60 °C)			
	Rinse (60 °C)			
	Drying			
Express + Hygiene	Pre Wash (50 °C)	80	1.25	10
	Wash (60 °C)			
	Rinse (65 °C)			
	Drying			
Quick Wash (DW60M6050**/ DW60M6051**)	Wash (45 °C)	30	0.75	11
	Rinse (50 °C)			
	Rinse (55 °C)			
Auto	Pre Wash (45 °C)	150	0.9-1.3	11-15
	Auto (45-55 °C)			
	Rinse			
	Rinse (65 °C)			
	Drying			
Pre Wash	Pre Wash	15	0.02	4



The wash time varies depending on the pressure and temperature of the supplied water.



Quick Wash: Continuous use of the Quick Wash cycle for an extended time is not recommended. This may reduce the performance of the water softener.


# Cleaning and care

## CLEANING THE FILTERS

### Filtering system

For your convenience, we have placed the drain pump and filtering system within easy reach inside the tub. There are three components of the filtering system: the main filter, the coarse filter, and the fine filter.

1. **Main filter:** Food and soil particles trapped by this filter are pulverized by a special jet on the lower spray arm and washed down the drain.
2. **Coarse filter:** Larger items, such as pieces of bone or glass, that could clog the drain are trapped in the coarse filter. To remove an item caught in this filter, gently squeeze the tabs on top of this filter and lift it out.
3. **Fine filter:** This filter holds soil and food residue in the sump area and prevents it from being redeposited on the dishes during a cycle.

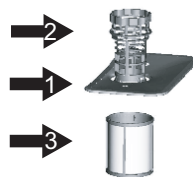


**⚠ ATTENTION:** Do not put the fine filter upside down.

### Filter assembly

For best performance and results, the filter assembly must be cleaned. The filter efficiently removes food particles from the wash water, allowing it to be recirculated during the cycle. For this reason, it is a good idea to remove the larger food particles trapped in the filter after each wash cycle by rinsing the semicircular filter and cup under running water. To remove the filter assembly, turn it in anti-clockwise direction and lift the filter assembly up. The entire filter assembly should be cleaned regularly.

To clean the coarse filter and the fine filter, use a cleaning brush. Then, reinsert the entire assembly in the dishwasher, positioning in its seat, pressing downward, turning it clockwise direction.

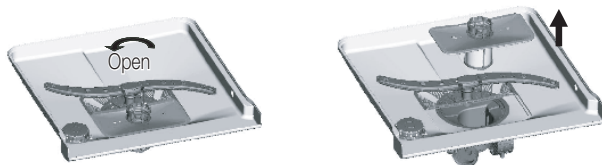

The dishwasher must never be used without the filters. Improper replacement of the filter may reduce the performance level of the appliance and damage dishes and utensils.

**⚠ WARNING:** Never run the dishwasher without the filters in place. When cleaning the filters, do not damage them. Otherwise the filters may not perform as intended and poor wash results or damage to the internal parts may be encountered.